



## Coriolis Mass Flow Meter

**UMC4 with  
TM, TME,  
TMU, TMR  
TM-SH**

**Supplementary Operating Manual for  
explosion-proof flow meters**



**This operating manual contains important information for the operation in potentially explosive atmospheres**

**Please read the instructions carefully and store them in a safe place for future reference**

## CONTENTS

INTRODUCTION.....	4
I Shipping and storage; product inspection.....	4
II Warranty.....	4
III Validity of this operating manual.....	4
IV Repairs and hazardous materials.....	4
1. STEPS PRIOR TO OPERATION.....	5
1.1 Installation, mounting, commissioning and maintenance.....	5
1.2 Hazard warnings.....	6
1.3 Proper use of the device.....	6
2. IDENTIFICATION.....	7
3. GENERAL INFORMATION ABOUT EXPLOSION PROTECTION.....	8
4. CORIOLIS MASS FLOW METER.....	9
4.1 Description of the TM, TME, TMU and TMR sensors.....	9
4.2 Device identification.....	9
4.3 Mounting.....	10
4.3.1 Thermally insulated sensor.....	10
4.3.2 Heated sensor.....	10
4.3.3 Connection sensor – transmitter.....	10
4.3.3.1 Sensor Cable Pin Assignment.....	11
4.3.3.2 Cable Parameters.....	11
4.3.3.3 Equipotential bonding.....	11
4.4 EC Type-Examination Certificate for the sensors.....	12
4.4.1 Sensor Parameters.....	12
4.4.2 Ambient temperature range $T_a$ .....	13
4.4.2.1 Conditions for safe operation.....	14
4.5 Description of the UMC4 transmitter.....	14
4.5.1 Device identification.....	14
4.5.2 Ignition category of the transmitter.....	14
4.5.3 Connecting cables.....	15
4.5.3.1 Sensor circuits.....	15
4.5.3.2 Electrical connection of power and signal circuits.....	15
4.5.3.3 Cable and conduit entries.....	16
4.5.3.4 Equipotential bonding.....	16
4.5.4 Parameters for the UMC4 transmitter.....	16
4.5.4.1 Power circuit (terminals L, N and PE).....	16
4.5.4.2 Passive non-intrinsically safe circuits.....	16
4.5.4.3 Sensor circuits type of protection Ex ia II.....	17
4.5.4.4 Signal output circuits with Ex ia II type of protection.....	18

4.5.4.5	Ambient temperature range Ta .....	18
5.	INSTALLATION AND COMMISSIONING .....	19
5.1	Special conditions for safe use for the UMC4.....	19
5.2	General conditions for safe operation.....	19
5.3	Requirements for installation in all environments.....	20
5.4	Ex relevant screw and bolt torques .....	20
6.	MAINTENANCE AND REPAIR WORK .....	21
6.1	Definition of terms according to IEC 60079-17:.....	21
7.	WARNING NOTICES.....	22
8.	MODEL CODES .....	23
8.1	The Transmitter UMC4 .....	23
8.2	The TM Sensor .....	24
8.3	The TMU Sensor .....	25
8.4	The TME Sensor.....	26
8.5	The TMR Sensor .....	27
8.6	The TM-SH Sensor.....	28
9.	EC DECLARATION OF CONFORMITY.....	29

## Introduction

### I Shipping and storage; product inspection

#### Shipping and Storage

The device is to be safeguarded against moisture, dirt, impact and damage.

#### Product inspection

Upon receipt of the product, the consignment should be checked for completeness. The data of the device have to be compared with the packing slip and the order documents

Notify us of any shipping damage immediately upon receipt of the product. Any damage claim received at a later time will not be honored.

### II Warranty

Your flow meter was manufactured in accordance with the highest quality standards and was thoroughly tested prior to shipment. However, in the event any problem arises with your device, we will be happy to resolve the problem for you as quickly as possible under the terms of the warranty which can be found in the terms and conditions of delivery. Your warranty will only be honored if the device was installed and operated in accordance with the instructions for your device. Any mounting, commissioning and/or maintenance work is to be carried out by qualified and authorized technicians only.

### III Validity of this operating manual



**Note!** The present instructions apply to explosion-proof Coriolis flow meters TM/TME/TMU/TMR and TM-SH series which are operated in conjunction with the UMC4 transmitter **as of year of construction October 2018 or later.**

These instructions are supplementary operating manual for non-explosion proof Coriolis flow meters. If you do not have a copy of the latter instructions, please request one from Heinrichs Messtechnik GmbH or download the instructions from our website.

The instructions herein pertain primarily to explosion proof Coriolis flow meters. The technical data in the mounting and operating instructions for non-explosion proof Coriolis flow meters still apply insofar as the present instructions do not replace them or exclude their application.

### IV Repairs and hazardous materials

It is important that you do the following before shipping your flow meter to Heinrichs Messtechnik GmbH for repair:

- Enclose a description of the problem with your device. Describe in as much detail as possible the application and the physical and chemical properties of the fluid.
- Remove any residues from the device and be sure to clean the seal grooves and recesses thoroughly. This is particularly important if the fluid is corrosive, toxic, carcinogenic, radioactive or otherwise hazardous.

The operator is liable for any substance removal or personal damage costs arising from inadequate cleaning of a device that is sent for repair.

## 1. Steps prior to operation



Prior to installation and operation, it is essential that the operator familiarizes himself with all of the instructions and information contained in the manual for non-explosion proof Coriolis flow meters as well as the present instructions. If any part of either manual is missing, contact Heinrichs Messtechnik GmbH to request a new manual. These manuals can also be downloaded from our website.

The UMC4 transmitter described herein is only to be used to measure mass and volume flow, as well as liquid and gas density and temperature, in conjunction with a Heinrichs Messtechnik GmbH TM, TME, TMU, TMR or TM-SH sensor.

### 1.1 Installation, mounting, commissioning and maintenance

Installation, mounting, commissioning and maintenance are to be performed by a technician trained to work with explosion-proof devices, or by a Heinrichs Messtechnik service technician.



#### Warning

Any maintenance or repair that safety relevant in terms of explosion-protection is to be carried out by the manufacturer, an authorized Heinrichs

**Heinrichs Messtechnik GmbH accepts no liability for any loss or damage of any kind arising from improper operation of any product, improper handling or use of any replacement part, or from external electrical or mechanical effects, overvoltage or lightning. Any such improper operation, use or handling shall automatically invalidate the warranty for the product concerned.**

In the event of a problem please contact the service center of Heinrichs Messtechnik:

 Phone: +49 221 49708-0  
 Fax: +49 221 49708-178  
 Internet: [www.heinrichs.eu](http://www.heinrichs.eu)  
Email: [info@heinrichs.eu](mailto:info@heinrichs.eu)

Contact our customer service department if your device needs repair or if you need assistance in diagnosing a problem with your device.

## 1.2 Hazard warnings

The purpose of the hazard warnings listed below is to ensure that device operators and maintenance personnel are not injured and that the flow meter and any devices connected to it are not damaged.

The safety advisories and hazard warnings in the present document that aim to avoid placing operators and maintenance personnel at risk and to avoid material damage are prioritized using the terms listed below, which are defined as follows in regard to the instructions herein and the advisories pertaining to the device itself.

### Warning



means that failure to take the prescribed precautions **could result** in injury, substantial material damage or even death. Always comply to these warnings and proceed with caution.

### Caution



means that failure to take the prescribed precaution **could result** in material damage or destruction of the device. We advise always to abide to these instructions!

### Note



means that the accompanying text contains important information about the product, handling the product or about a section of the documentation that is of particular importance.

## 1.3 Proper use of the device



### Warning

The operator is responsible for ensuring that the material used in the sensor and transmitter housing is suitable and that such material meets the requirements for the fluid being used and the ambient site conditions. The manufacturer accepts no responsibility in regard to such material and housing.

---



### Warning

In order for the device to perform correctly and safely, it must be shipped, stored, set up, mounted operated and maintained properly.

---

## 2. Identification

Manufacturer: Heinrichs Messtechnik GmbH  
Robert-Perthel-Strasse 9  
D-50739 Cologne  
Germany



Phone: +49 221 49708-0

Fax: +49 221 49708-178



Internet: [www.heinrichs.eu](http://www.heinrichs.eu)

Email: [info@heinrichs.eu](mailto:info@heinrichs.eu)

Product type: Mass flow-rate meter for liquid and gaseous products

Product name: Sensor type: TM / TMU / TME / TMR / TM-SH  
Transmitter type: UMC4

File name: umc4\_ex-ba\_21.01\_en.doc

Version: 21.01,  
Date, January 31, 2021

### 3. General information about explosion protection

Acc. Directive 94/9/EC (ATEX)	<b>Example designation</b>		CE <sub>0158</sub> Ex	II	2G	Ex	ia	IIC	T6	Gb
	<b>Equipment groups</b>									
	I	Equipment group I applies to equipment intended for use in underground parts of mines as well as those parts of surface installations of such mines endangered by firedamp and/or combustible dust.								
	II	Equipment group II applies to equipment intended for use in other places liable to be endangered by explosive atmospheres. This group is subdivided into three categories.								
	<b>Equipment category</b>									
	Gas	Dust	Definition							
	1G (0)	1D (20)	Equipment in this category is intended for use in areas in which explosive atmospheres caused by mixtures of air and gases, vapours or mists or by air/dust mixtures are present continuously, for long periods or frequently.							
	2G (1)	2D (21)	Equipment in this category is intended for use in areas in which explosive atmospheres caused by gases, vapours, mists or air/dust mixtures are likely to occur.							
	3G (2)	3D (22)	Equipment in this category is intended for use in areas in which explosive atmospheres caused by gases, vapours, mists, or air/dust mixtures are unlikely to occur or, if they do occur, are likely to do so only infrequently and for a short period only.							
	(The numbers in round brackets correspond to the IEC Zones.)									
Acc. EN 60079-0 ff / IEC 60079-0 ff	<b>Ex = Explosion-proof electrical equipment</b>									
	<b>Types of protection</b>									
		General requirements	IEC 60079-0							
	„d“	Flameproof enclosure	IEC 60079-1							
	„e“	Increased safety	IEC 60079-7							
	„i“	Intrinsic safety (ia, ib)	IEC 60079-11							
	„t“	Equipment dust ignition protection by enclosure "t" (ta, tb or tc)	EN 60079-31							
	<b>Explosion groups</b>									
	Gases and vapours									
	IIA	Acetone, benzene, fuel oil, ethanoic acid								
IIB	City gas, ethylene, isoprene									
IIC	Acetylene, hydrogen, carbon bisulphide									
Dust Atmospheres										
IIIA	Fibers and flyings									
IIIB	Non-conductive dusts									
IIIC	Metal dusts									
<b>Temperature classes</b>										
Maximum surface temperature		Temperature class								
450 °C	842 °F	T1								
300 °C	572 °F	T2								
200 °C	392 °F	T3								
135 °C	275 °F	T4								
100 °C	212 °F	T5								
85 °C	185 °F	T6								
<b>Equipment protection level, EPL</b>										
Gases: Ga, Gb oder Gc		Dust: Da, Db or Dc								

Explosion protection designations [square brackets] refer to "Related electrical equipment or circuits."

## 4. Coriolis mass flow meter

### 4.1 Description of the TM, TME, TMU and TMR sensors

The TMU sensor is an "Intrinsic safety" type of protection device that is outfitted with the following four independent potential-free circuits: These circuits are safely separated in the sensor

Excitation circuit

Sensor circuit 1

Sensor circuit 2

Temperature sensor circuit (PT1000)

If the transmitter is mounted externally, it should be connected to the sensor using a Heinrichs Messtechnik cable that is specially designed for this purpose.


Although the appearance of the standard and explosion-proof transmitters is identical and their rating plates contain the same information, **under no circumstances should a standard (non-explosion proof) transmitter be connected to an explosion-proof sensor!**

### 4.2 Device identification

The rating plates on Heinrichs Messtechnik flow meters that are suitable for use in potentially explosive atmospheres are labeled accordingly. Since the sensor and transmitter have different ratings, each device has its own rating plate.

#### TM/TME/TMU/TMR/TM-SH rating plate

Example: TM for process temperatures ranging from - 40 °C to 100 °C.

 KOBOLD Group D-50739 Köln Robert-Perthel-Str. 9 Germany	 See Manual <a href="http://www.heinrichs.eu">www.heinrichs.eu</a>	<b>Type:</b> TM-T23-305I0350-R0L3-L-B-0-00 <b>Ser. No.:</b> 123456 <b>MF-Date:</b> 2018/10 <b>TAG No.:</b> TM008T*26958034 <b>Tamb:</b> -20°C to 60°C
	 CE 0158	<b>CONNECTION:</b> DN15 PN40 Form B 2 <b>WETTED PARTS:</b> Tantalum <b>PROCESS TEMP.:</b> -40°C to 100°C <b>PS:</b> 40 bar <b>PT:</b> 60 bar <b>PED / Art.3 Para.4</b> PN BODY: 0 bar <b>Qmin = 40 kg/h</b> <b>Qmax = 350 kg/h</b> <b>Sensor Constant C:</b> 84,322 <b>Cable fittings :</b> M20 x 1,5mm
 DMT 01 ATEX E 149X II 1/2 G Ex ia IIC T2...T6 Ga/Gb	 IECEx BVS 11.0084X Ex ia IIC T2...T6 Ga/Gb	<b>Control Drawing:</b> Consult Control TM-CSA-1100 Drawing for Warnings
 NEPSI: GYJ17.1166X Ex ia IIC T2 .. T6 Ga/Gb	 Class I Div 1 Group A,B,C,D Class I Zone 1: AEx ia TX Ga CSA18CA70171067X	<b>EXCITER CIRCUIT TYPE: EC1R</b>

### 4.3 Mounting

The mounting instructions for the standard sensor also apply to the explosion-proof sensor.

#### 4.3.1 Thermally insulated sensor

The explosion-proof sensor can be outfitted with thermal insulation in potentially explosive atmospheres as well. However, the insulation should only cover half of the support tube on which the junction box or integrated transmitter is mounted.

#### 4.3.2 Heated sensor

To avoid crystallization in the flow tubes, the sensor can be externally heated. Any heating technique or device may be used. By use of electrical heating devices, these must be suitable for use in the potentially explosive environments.

**It is the operator’s responsibility to ensure that the heating temperature does not exceed the maximum allowable temperature for the fluid and/or the maximum allowable temperature range for the potentially explosive atmosphere in which the device is being operated.**

The maximum allowable temperature range for the fluid is indicated on the flow meter rating plate. It is also the operator’s responsibility to ensure that no hazards are created by hot surfaces pursuant to EN 1127-1 (Explosive atmospheres - Explosion prevention and protection) paragraphs 5.2 and 6.4.2.


#### 4.3.3 Connection sensor – transmitter

##### Compact meters (sensor and transmitter form a unit and are connected electrically)

The electrical connection is made by the manufacturer. Furthermore the proof of the intrinsic safety of the sensor circuits (according EN 60079-14) was carried out by the manufacturer and ensured. For these circuits no action is required by the operator.

##### Remote installation

A dedicated cable **SLI2Y (SP) CY 5 x 2 x 0.5 mm<sup>2</sup> [blue]** is to be used for the electrical connection between sensor and remote mount transmitter. This cable, which is available from Heinrichs Messtechnik, has five twisted pairs, each of which has a foil shield and filler cord. The filler cords are to be installed on the “shield” terminal in both the sensor and transmitter. The five twisted wire pairs are themselves shielded by tinned copper wire mesh. This external cable shield is connected to the housing via a dedicated EMC cable fitting, thus ensuring optimum noise immunity.

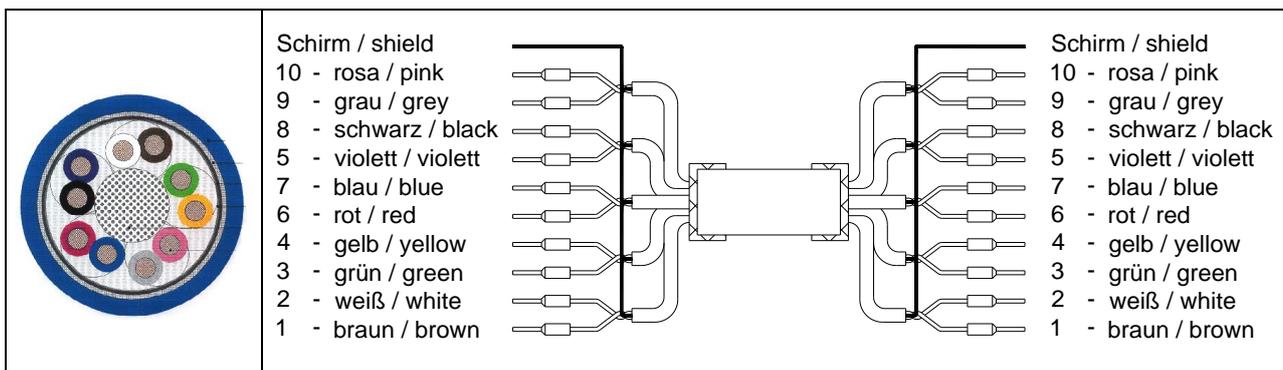

#### 4.3.3.1 Sensor Cable Pin Assignment

Pin Designation	Connection / Pin Assignment	Protection Type
Ex ia		
<b>Sensor circuit</b>		
Pick-Up1 +	1	x
Pick-Up1 -	2	x
Pick-Up2 +	3	x
Pick-Up2 -	4	x
Tlk-	5	x
Temperature Sensor -	6	x
Temperature Sensor +	7	x
Tlk+	8	x
Exciter coil +	9	x
Exciter coil -	10	x
Schirm	Schirm	x

#### 4.3.3.2 Cable Parameters

The operator is to comply in all cases with the applicable installation regulations such as EN 60079-14 "Electrical apparatus for explosive gas atmospheres- Part 14: Electrical installations in hazardous areas

The operator is to comply in all cases with the applicable installation regulations such as EN 60079-14 "Electrical apparatus for explosive gas atmospheres- Part 14: Electrical installations in hazardous areas".

Applicable guidelines pertaining to the interconnection of intrinsically safe circuits must also be observed.

The following maximum values apply to the cable mentioned above:

$C_L = 100 \text{ pF/m}$  wire to wire

$L_L = 700 \text{ }\mu\text{H/km}$  wire to wire

$C_L = 170 \text{ pF/m}$  wire to shield

$L_L = 500 \text{ }\mu\text{H/km}$  wire to shield



#### Warning

If a connecting cable other than the Heinrichs Messtechnik cable is used, the intrinsic safety of the cable is to be validated using the cable's nominal values

#### 4.3.3.3 Equipotential bonding

Equipotential bonding between the sensor and transmitter is essential and must be established and maintained. Connection points are provided on the outside of the sensor and transmitter for this purpose.

#### 4.4 EC Type-Examination Certificate for the sensors

The sensors, TM, TMU, TME, TMR und TM-SH are approved with the examination certificates;



**DMT 01 ATEX E 149 X**  
**II 1/2G Ex ia IIC T6-T2 Ga/Gb**



**IECEx BVS 11.0084 X**  
**Ex ia IIC T6-T2 Ga/Gb**

for the use in potentially explosive atmospheres. (hazardous classified locations)

The sensor may be used in such a way that inside the measuring tubes explosive atmosphere may be present often or for a long time (Zone 0).



#### Warning

In order to comply with the requirements for explosive atmospheres, it is essential that the maximum electrical and thermal values set forth below are observed.

#### 4.4.1 Sensor Parameters

##### Exciter circuit (terminals 9 and 10)

##### For type EC1

Voltage	Ui	30 V
Current	Ii	90 mA
Power	Pi	0,4 W
Effective internal capacitance	Ci	negligible
Effective internal inductance	Li	4,38 mH

##### For exciter circuit type EC2 (remote mount transmitter configuration)

For connecting an intrinsically safe circuit with the Ex ia IIC type of protection, with linear output characteristic and the following maximum values:

Voltage	Uo	30 V
Current	Io	90 mA
Power	Po	0.8 W

##### Sensor circuits (terminals 1 – 2 and 3 - 4)

Voltage	Ui	DC	30 V
Current	Ii		50 mA
Power	Pi		0,3 W
Effective internal capacitance	Ci		negligible
Effective internal inductance	Li		14 mH
Output voltage	Uo		AC 0,3 V

#### Temperature sensor circuit (terminals 5 to 8)

Voltage	U <sub>i</sub>	DC	30 V
Current	I <sub>i</sub>		100 mA
Power	P <sub>i</sub>		0,1 W
Effective internal capacitance	C <sub>i</sub>		negligible
Effective internal inductance	L <sub>i</sub>		negligible

#### 4.4.2 Ambient temperature range T<sub>a</sub>

Depending on type of connection, installation, process temperature and temperature class:

##### With plug

Adapter	Process temperature (°C) (1)	Ambient temperature range (°C) (1)	Temperature class
without	40	-40 to +40	T6
without	60	-40 to +60	T5
without	60	-40 to +10	T4
60 mm	100	-40 to +100	T4
160 mm	120	-40 to +100	T4
160 mm	180	-40 to +100	T3
260 mm	220/260 <sup>(2) (3)</sup>	-40 to +100	T2

(1) The maximum ambient and process temperatures of the TM-SH are restricted to 60 °C and 100 °C respectively

(2) The maximum process temperature of 260 °C only short-term. Refer to section 3.1 for more details.

(3) The process temperatures 220/260 °C are only applicable for TM, TMU and TMR sensors

##### Remote mount configuration

Adapter	Process temperature (°C)	Ambient temperature range (°C)	Temperature class
without	40	-40 to +40	T6
without	60	-40 to +60	T5
without	100	-40 to +100	T4
100 mm	120	-40 to +100	T4
100 mm	180	-40 to +100	T3
200 mm	220/260 <sup>(2)</sup>	-40 to +100	T2

(2) The maximum process temperature of 260 °C only short-term. Refer to section 3.1 for more details.

##### Integral mount configuration

See chapter 4.5.4.5

#### 4.4.2.1 Conditions for safe operation

When the sensor is mounted externally (remote mount configuration), equipotential bonding between the sensor and transmitter is to be realized.

If the sensor is used at an ambient temperature of less than -20 °C or greater 60 °C, suitable cables, cable entries and conduit entries are to be used.

The operational wall thickness of the stainless steel flow tube is < 1 mm. The operator is to ensure that this parameter does not give rise to any risk of fluid or mechanical damage.


### 4.5 Description of the UMC4 transmitter

When used in conjunction with the sensor, the **UMC4** transmitter measures the mass flow of liquids and gases in pipelines. The transmitter can be mounted on the sensor or remote. The configuration can be carried out by using a built-in or standalone control unit. Thereby a high degree of adaptability to user requirements is ensured. Although the basic device settings, e.g. calibration data are factory-configured, the settings pertaining to measurement data output and evaluation are user definable.

The UMC4 drives the excitation of the oscillating system in the mass flow sensor and prepares the sensor signals (position sensor 1 and 2 and the temperature sensor Pt 1000). As a standard, 2 passive analog outputs 4-20 mA and 2 passive binary outputs are available. (1 pulse **or** 1 frequency output, 1 status output). Through current output 1, an additional digital modulated data transmission via HART® is possible.

#### 4.5.1 Device identification

The identification of the transmitter UMC4 is subject to the following examples.

Signal outputs intrinsically safe	Signal outputs <u>non</u> intrinsically safe
 <p>KOBOLD Group D-50739 Köln Robert-Perthel-Str. 9 www.heinrichs.eu</p> <p>CE 0158</p> <p>See Manual</p>  <p>Type: UMC4-E11A21H MF-Date: 2011/12 Ser. No.: 285002 TAG No.: --- Supply: 90-265 V AC / 50/60Hz / 2,5 VA Tamb: -20°C to +60°C</p> <p>Signal-outputs passive Ex [ia Ga] I-OUT 4-20mA / HART, IMP-OUT, STATUS Sensor circuits Ex [ia Ga]</p> <p> BVS 10 ATEX E 110 X IECEX BVS 11.0088X II (1)2G Ex d [ia Ga] IIC T4-T3 Gb WARNING - DO NOT OPEN EQUIPMENT AT THE PRESENCE OF EXPLOSIVE ATMOSPHERE. SEAL AT THE WALL OF ENCLOSURE. Cable fittings M20 x 1,5</p>	 <p>KOBOLD Group D-50739 Köln Robert-Perthel-Str. 9 www.heinrichs.eu</p> <p>CE 0158</p> <p>See Manual</p>  <p>Type: UMC4-B11A22 MF-Date: 2011/12 Ser. No.: 285000 TAG No.: --- Supply: 90-265 V AC / 50/60Hz / 2,5 VA Tamb: -20°C to +60°C</p> <p>Signal-outputs passive: Not intrinsically safe I-OUT 4-20mA / HART, IMP-OUT, STATUS Sensor circuits Ex [ia Ga]</p> <p> BVS 10 ATEX E 110 X IECEX BVS 11.0088X II (1)2G Ex d [ia Ga] IIC T4-T3 Gb WARNING - DO NOT OPEN EQUIPMENT AT THE PRESENCE OF EXPLOSIVE ATMOSPHERE. SEAL AT THE WALL OF ENCLOSURE. Cable fittings M20 x 1,5</p>

#### 4.5.2 Ignition category of the transmitter

The transmitter and the terminals are located in an explosion proof housing Ex d. The signal outputs can be realized either as "Intrinsic safety" type of protection ("i") or as non-intrinsically safe signal outputs. The two types of protection are not to be combined.

The transmitter complies with Category 2 for use in Zone 1, while the sensor circuits comply with Category 1 "ia."

### 4.5.3 Connecting cables

The connecting cables for power supply, signal outputs and sensor circuits must adhere to the requirements of EN 60079-14.

---



#### Note

The connecting cables are to be installed in such a way that they are protected against mechanical damage and unduly high temperatures.

The external diameters of the connecting cables must be compatible with the thickness range of the cable glands and rubber seals used.

The cables and cable glands used must be compatible with the type of protection of the junction box being used.

The dummy plugs used for unused cable glands must be compliant with the type of protection of the housing being used.

It must be ensured that the cable gland gaskets are correctly seated.

---

#### 4.5.3.1 Sensor circuits

##### Compact mounted transmitter UMC4

The sensor circuits in compact mounted assemblies are considered as internal connections and are already wired up and matched by the manufacturer. There is no need to check the intrinsic safety by the operator.

##### Remote installation of UMC4

The intrinsically safe sensor circuits are brought out from the converter with a cable tail of at least 1 m. The length of the cable can be specified when ordering.

The transmitter is fixed by a bracket to a wall or a pipe.

The sensor cable is to be installed by the operator so that it is protected from tension.

The assignment of the wire colors and the circuits see section 4.3.3

#### 4.5.3.2 Electrical connection of power and signal circuits

The electrical connection of power and signal circuits are realized in the terminal compartment of the transmitter. In it are intrinsically safe and non-intrinsically safe circuits, depending on the type of protection of the signal output circuits. The type of protection of the terminal compartment is Ex d.

The installation of the cable in the terminal compartment Ex d can be done in two ways:

Direct connection of the cable through a certified flameproof cable gland

Direct connection of cable and wires through specially certified conduits. The associated stopping boxes must be installed close to the housing.

#### 4.5.3.3 Cable and conduit entries

Cable and conduit entries are not part of the instrument and have to be supplied by the operator according to the relevant way of installation. They have to be certified for the type of protection of the transmitter and fit to the cables used.

The transmitter series UMC4 for temperature class T4 does not have own ignition sources as long as the transmitter runs in smooth operation. Therefore explosion proof certified cable and conduit entries with sealing ring can be used. See also EN 60079-14/10.3.

#### 4.5.3.4 Equipotential bonding

When the sensor is mounted externally (remote mount configuration), equipotential bonding between the sensor and transmitter is to be realized. Terminals are provided on the outside of the sensor and transmitter for this purpose.

#### 4.5.4 Parameters for the UMC4 transmitter

##### 4.5.4.1 Power circuit (terminals L, N and PE)

Nominal voltage		AC	90 to 230	V
Max. voltage	Um	AC	265	V
Nominal voltage		AC	24	V
Max. voltage	Um	AC	60	V
Nominal voltage		DC	19 to 36	V
Max. voltage	Um	DC	60	V

##### 4.5.4.2 Passive non-intrinsically safe circuits

Current output 1 (terminals 41 to 42)  
 Current output 2 (terminals 43 to 44)  
 Binary output 1, passive (terminals 46 to 47)  
 Binary output 2, passive (terminals 49 to 50)

Voltage	Um	AC/DC	60	V
Max. current of power supply			500	mA

#### 4.5.4.3 Sensor circuits type of protection Ex ia II

##### Exciter circuit, terminals 9 (grey) and 10 (pink)

Linear output characteristic				
Voltage	U <sub>o</sub>	DC	12,5	V
Current	I <sub>o</sub>		90	mA
Power	P <sub>o</sub>		271	mW

##### Type of protection Ex ia IIC

Max. external inductance	L <sub>o</sub>		5	mH
Max. external capacitance	C <sub>o</sub>		1320	nF

##### Type of protection Ex ia IIB

Max. external inductance	L <sub>o</sub>		18	mH
Max. external capacitance	C <sub>o</sub>		8400	nF

##### Temperature sensor circuit, terminals 5 (purple), 6 (red), 7(blue), 8(black)

Voltage	U <sub>o</sub>	DC	12,15	V
Current	I <sub>o</sub>		3,84	mA
Power	P <sub>o</sub>		12	mW
Linear output characteristic				

##### Type of protection Ex ia IIC

Max. external inductance	L <sub>o</sub>		1000	mH
Max. external capacitance	C <sub>o</sub>		1305	nF

##### Type of protection Ex ia IIB

Max. external inductance	L <sub>o</sub>		1000	mH
Max. external capacitance	C <sub>o</sub>		8385	nF

##### Sensor circuits, (terminals, 1(brown) - 2(white) and 3(green) – 4(yellow))

Values for each circuit				
Voltage	U <sub>o</sub>	DC	12,15	V
Current	I <sub>o</sub>		16	mA
Power	P <sub>o</sub>		47	mW
Linear output characteristic				

##### Type of protection Ex ia IIC

Max. external inductance	L <sub>o</sub>		140	mH
Max. external capacitance	C <sub>o</sub>		1305	nF

##### Type of protection Ex ia IIB

Max. external inductance	L <sub>o</sub>		510	mH
Max. external capacitance	C <sub>o</sub>		8385	nF

**4.5.4.4 Signal output circuits with Ex ia II type of protection**

**Passive current output 1 (terminals 11-12) and**

Passive current output 2 (terminals 13-14) with Ex ia IIC type of protection

Voltage	U <sub>i</sub>	DC	30	V
Current	i <sub>i</sub>		150	mA
Power	P <sub>i</sub>		1,3	W
Internal inductance	L <sub>i</sub>		0,1	mH
Internal capacitance	C <sub>i</sub>		20	nF

**Binary outputs**

Passive binary output 1 (terminals 16 - 17)

Passive binary output 2 (terminals 19 – 20)

Potential free opto coupler-output current with Ex ia IIC type of protection

Voltage	U <sub>i</sub>	DC	30	V
Current	i <sub>i</sub>		200	mA
Power	P <sub>i</sub>		3	W
Effective internal inductance	L <sub>i</sub>			negligible
Effective internal capacitance	C <sub>i</sub>			negligible

**4.5.4.5 Ambient temperature range Ta**

**For type UMC4-B\*\*\*\*\* (compact version)**

As a function of process temperature, way of installation and temperature class according to the following table:

Process temperature	Ambient temperature	Temperature class
- 20 °C up to	- 20 °C up to	
100 °C	60 °C	T4
130 °C	55 °C	T4
150 °C	50 °C	T3

**For the types UMC4-D\*\*\*\*\* and UMC4-E\*\*\*\*\* (remote version).**

If the transmitter is installed remote from the process, the ambient temperature range is -20°C to +60 °C.

## 5. Installation and Commissioning

The mounting instructions for the standard sensor also apply to the explosion-proof sensor.

Depending on the approval of the connected transmitter, the sensor may either be:

- Compact mounted, mechanically fastened to the transmitter presenting a single unit.  
or
- Remotely installed and connected with a special sensor cable.

### 5.1 Special conditions for safe use for the UMC4

For the electrical connections, specially certified cable entries and/or plugs are to be used in accordance with the prevailing type of protection and ambient temperature. Furthermore, the connection cable used must be suitable for the prevailing ambient temperature range.

When conduit entries are connected to the transmitter enclosure, they must be certified for this purpose and the associated stopping boxes must be mounted in the immediately vicinity of the enclosure.

Integral mounted transmitters are designed with intrinsically safe sensor circuits. All electrical relevant values are coordinated by Heinrichs Messtechnik and not important for the user.

- a) For type UMC4-E\*\*\*\*\* and UMC4-D\*\*\*\*\* transmitters, and when using a connection cable other than the manufactures specified cable, the intrinsic safety of the cable is to be validated using the cables nominal parameters:

Cable capacitance	100 pF/m	$L_L = 0.7\text{mH/km}$
Cable inductance	0,7 $\mu\text{H/m}$	$L_L = 0.5\text{mH/km}$

For type UMC4-E\*\*\*\*\* transmitters the sensor cable must be installed in such a way that tensile force is omitted.

Damaged threaded or flat joints which may impair the IP protection of the enclosure shall not be repaired or modified. The equipment shall be returned to the manufacturer for repair and replacement.

### 5.2 General conditions for safe operation

If the conditions described in this document are not adhered to or if there is any inappropriate interference with the equipment, the manufactures warranties expire.

Conditions described in this manual, as well as the permitted operating conditions which have been defined for the sensor and which are stated on the rating plates must be adhered to.

Appropriate measures shall be met to prevent any unintentional or inadmissible damage to the device.

The operator shall ensure that the equipment is only installed in areas which comply with the approved types of protection and environments.

All connected electrical equipment must be suitable for its intended use.

The operator shall ensure protection against lightning according to local regulations

The danger of objects falling onto the sensor shall be excluded

The maximum process temperature of 260 °C is only permitted for periods of maximum 1 hour, for example during the ramping up of the process temperature, or temperature regulation. Prolonged

operation at temperatures above 220 °C may lead to an accelerated deterioration insulation materials and thus a reduction in the sensors life span.

### **5.3 Requirements for installation in all environments**

- a) The installation of the intrinsically safe circuits requires a control drawing (system description), to be issued by the operator/erector.
- b) The equipment is only to be installed and connected in a de-energized state.
- c) The sensor is to be installed (from specialists) according to applicable regulations.
- d) When mounted separately (remote mount configuration), equipotential bonding between the sensor and transmitter must be ensured
- e) It is to be insured that the intrinsically safe circuits of the sensor cable are not laid together with non-intrinsically safe circuits.
- f) If the sensor is used at an ambient temperature of less than -20 °C or greater 60 °C, suitable cables, cable entries and conduit entries are to be used.
- g) The operational wall thickness of the stainless steel flow tubes may be < 1 mm. In this case, the operator is to ensure that in the area of these tubes, no risk of damage by the process medium or through mechanical influence shall occur.
- h) Although the measuring tubes are in constant oscillation, the deflection of this oscillation is significantly smaller (< 1 mm) than the materials stress levels allow and thus presents no addition requirements for protective measures.
- i) The sensor may be used in such a way that in the measuring tubes an explosive atmosphere may be present occasionally or for a long period of time.
- j) Seized screws or adhering joints (e.g. by frost or corrosion) are not to be opened with force when the presence of a potentially explosive atmosphere is considered possible.
- k) Where substances of explosion group "A" or "IIC" are present and the presence of an Ex-atmosphere is considered possible, only non-sparking tools shall be used.
- l) The electrical connections from the sensor to the junction box are made by means of a connection flange. Care must be taken to guarantee the IP protection class.

### **5.4 Ex relevant screw and bolt torques**

Potential Equalisation fixation	6 Nm
Nuts sensor-neck/J-box	6 Nm
Screws J-box lid (Aluminium)	2 Nm
Screws J-box lid (Polyester)	1.2 Nm
Cable glands to J-box adapter	12 Nm
Cable gland caps	8 Nm

## 6. Maintenance and repair work

### 6.1 Definition of terms according to IEC 60079-17:

**Maintenance:** defines a combination of any actions carried out to retain an item in, or restore it to, conditions in which it is able to meet the requirements of the relevant specification and perform its required functions.

**Inspection:** defines any action comprising careful scrutiny of an item carried out either without dismantling, or with the addition of partial dismantling as required, supplemented by means such as measurement, in order to arrive at reliable conclusion as to the condition of an item.

**Visual inspection:** defines an inspection which identifies, without the use of access equipment and tools, those defects, such as missing bolts, which will be apparent to the eye.

**Close inspection:** defines an inspection which encompasses those aspects covered by a visual inspection and, in addition, identifies those defects, such as loose bolts, which will be apparent only by the use of access equipment, for example steps, where necessary, and tools.

**Detailed inspection:** defines an inspection which encompasses those aspects covered by a close inspection and, in addition, identifies those defects, such as loose terminations, which will only be apparent by opening the enclosure, and/or using, where necessary, tools and test equipment.

- a) Maintenance or replacement work must be carried out by qualified personnel only, i.e. personnel qualified according to TRBS 1203 or similar.
- b) Only auxiliary components which comply with all European and national directives and legislations may be used in potentially explosive atmospheres
- c) After maintenance and repair works have been performed, all barriers and notices removed for that purpose must be returned to their original place.
- d) In the event that faults of the equipment are detected, the equipment is to be removed. The internal components cannot be repaired by the customer. The equipment is to be returned to the manufacturer for inspection.
- e) With the exception of the replaceable mains fuse, fuses may **not** be replaced by the operator, since affected Zener-diodes must also be simultaneously replaced. This work requires a follow-up adjustment, which can only be carried out at the manufacturer's factory.

#### Recommended inspection intervals

Activity		Visual inspection	Close inspection	Detailed inspection
		3 month interval	6 month interval	12 month interval
1	Visual inspection of equipment for intactness, removal of dust settlements	X		
2	Check of electrical system for intactness and functionality			X
3	Check of entire system		User's responsibility	

## 7. Warning notices

- The thread of the cable gland entry is noted on the rating plate
- The exciter circuit type as specified in the certificates is noted on the rated plate
- The following warnings or similar wordings are either printed on the rating plate, or are stated in the User Manual:

“Substitution of components may impair intrinsic safety”

“Do not open when energized or when an explosive atmosphere is present”


- The following warning or similar wording is printed on the plastic cover of the TME sensor body:

Caution! Electrostatic charging possible; To be considered during cleaning and maintenance work.

## 8. Model codes

### 8.1 The Transmitter UMC4

UMC4	-	A	B	C	D	E	F
------	---	---	---	---	---	---	---

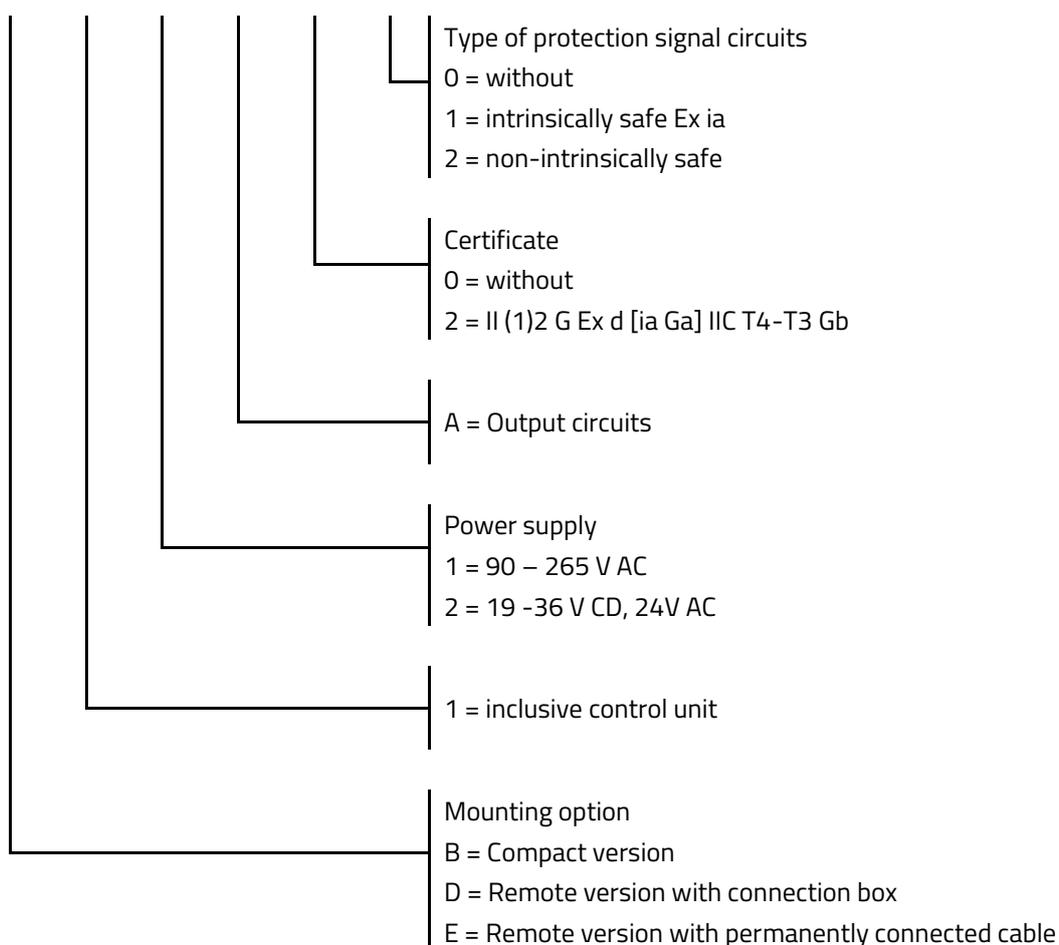

## 8.2 The TM Sensor

TM-	A	B	C	-	D	E	F	G	H	I	J	K	-	L	M	N	O	-	P	-	Q	-	R	-	S
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Pos.	Description	Remarks / EX-Relevance
A	Wetted Material	Non-Ex relevant position
B,C	Flow-Rate Range	Non-Ex relevant position
D,E,F,G	Process Connection	Non-Ex relevant position
H,I,J,K	Installation Length	Non-Ex relevant position
L	Enclosure Options	Non-Ex relevant position
M	Heating / Cooling	Non-Ex relevant position
N	Flow Direction	Non-Ex relevant position
O	<b>Sensor configurations</b>	
(*2) (*3)	1 - Mounted -50°C to 100°C (-58°F to 212°F)	Refer to Transmitter approval
	2 - Mounted -50°C to 150°C (-58°F to 302°F)	Refer to Transmitter approval
	3 - Remote -50°C to 100°C (-58°F to 212°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	4 - Remote -50°C to 180°C (-58°F to 356°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	5 - Remote -50°C to 220/260°C (-58°F to 500°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	6 - Remote -50°C to 100°C (-58°F to 212°F)	with ½" NPT Cable gland
	7 - Remote -50°C to 180°C (-58°F to 356°F)	with ½" NPT Cable gland
	8 - Remote -50°C to 220/260°C (-58°F to 500°F)	with ½" NPT Cable gland
	S- Remote -50°C to 100°C (-58°F to 212°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
	T - Remote -50°C to 180°C (-58°F to 356°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
	U - Remote -50°C to 220/260°C (-58°F to 500°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
P (*1)	<b>Approvals</b>	
	A - ATEX / IECEx – up to Supplement 6	II 1/2G Ex ia IIC T2...T6 Ga/Gb
	L - ATEX / IECEx – Supplement 7 onwards	II 1/2G Ex ia IIC T2...T6 Ga/Gb
Q	Certificates	Non-Ex relevant position
R	Supplementary equipment	Non-Ex relevant position
S,T,U,V	Additional Options	Non-Ex relevant position

(\*1) = After implementation of ATEX supplement 7 (IEC issue 1), sensors of supplement 6 (IEC issue 0) with the code „A“ shall no longer be produced, and are therefore no longer available for delivery.

(\*2) = The Abbreviations AI and PE determine whether an aluminium (AI) or polyester (PE) terminal box is selected.

(\*3) = The maximum process temperature of 260 °C is only permitted short-term. Refer to section **Fehler!**  
**Verweisquelle konnte nicht gefunden werden.** for more details

### 8.3 The TMU Sensor

TMU-	A	B	C	D	-	E	F	G	H	-	I	J	K	-	L	M	-	N	O	-	P	-	Q
------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Pos.	Description	Remarks / EX-Relevance
A	Wetted Material	Non-Ex relevant position
B,C,D	Model size	Non-Ex relevant position
E,F,G,H	Process Connection	Non-Ex relevant position
I	Enclosure Options	Non-Ex relevant position
J	Heating / Cooling	Non-Ex relevant position
K	Heating / Cooling connections	Non-Ex relevant position
L	<b>Sensor configurations</b>	
(*2) (*3)	A - Mounted -50°C to 100°C (-58°F to 212°F)	Refer to Transmitter approval
	B - Mounted -50°C to 150°C (-58°F to 302°F)	Refer to Transmitter approval
	C - Remote -50°C to 100°C (-58°F to 212°F)	with ½" NPT Cable gland <b>(AI)</b>
	D - Remote -50°C to 180°C (-58°F to 356°F)	with ½" NPT Cable gland <b>(AI)</b>
	E - Remote -50°C to 220/260°C (-58°F to 500°F)	with ½" NPT Cable gland <b>(AI)</b>
	F - Remote -50°C to 100°C (-58°F to 212°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	G - Remote -50°C to 180°C (-58°F to 356°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	H - Remote -50°C to 220/260°C (-58°F to 500°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	K - Remote -50°C to 100°C (-58°F to 212°F)	with HAN R23 Connector
	L - Remote -50°C to 180°C (-58°F to 356°F)	with HAN R23 Connector
	M - Remote -50°C to 220/260°C (-58°F to 500°F)	with HAN R23 Connector
	S- Remote -50°C to 100°C (-58°F to 212°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
	T - Remote -50°C to 180°C (-58°F to 356°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
	U - Remote -50°C to 220/260°C (-58°F to 500°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
	X - Customer specified	
M	<b>Approvals</b>	
(*1)	A - ATEX / IECEx – up to Supplement 6	II 1/2G Ex ia IIC T2...T6 Ga/Gb
	L - ATEX / IECEx – Supplement 7 onwards	II 1/2G Ex ia IIC T2...T6 Ga/Gb
N	Calibration Flow	Non-Ex relevant position
O	Calibration Density	Non-Ex relevant position
P	Supplementary Equipment	Non-Ex relevant position
Q	Design	Non-Ex relevant position

(\*1) = After implementation of ATEX supplement 7 (IEC issue 1), sensors of supplement 6 (IEC issue 0) with the code „A“ shall no longer be produced, and are therefore no longer available for delivery.

(\*2) = The Abbreviations AI and PE determine whether an aluminium (AI) or polyester (PE) terminal box is selected.

(\*3) = The maximum process temperature of 260 °C is only permitted short-term. Refer to section **Fehler!**  
**Verweisquelle konnte nicht gefunden werden.** for more details

### 8.4 The TME Sensor

TME -	A	B	C	-	D	E	F	G	H	I	J	-	K	-	L	-	M	-	N
-------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Pos.	Description	Remarks / EX-Relevance
A	Wetted Material	Non-Ex relevant position
B,C	Flow-Rate Range	Non-Ex relevant position
D,E,F,G	Process Connection	Non-Ex relevant position
H	Heating / Cooling	Non-Ex relevant position
I	Flow Direction	Non-Ex relevant position
J	<b>Sensor configurations</b>	
(*2)	1 - Mounted -50°C to 100°C (-58°F to 212°F)	Refer to Transmitter approval
	2 - Mounted -50°C to 150°C (-58°F to 302°F)	Refer to Transmitter approval
	3 - Remote -50°C to 100°C (-58°F to 212°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	4 - Remote -50°C to 180°C (-58°F to 356°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	6 - Remote -50°C to 100°C (-58°F to 212°F)	with ½" NPT Cable gland
	7 - Remote -50°C to 180°C (-58°F to 356°F)	with ½" NPT Cable gland
	S- Remote -50°C to 100°C (-58°F to 212°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
	T - Remote -50°C to 180°C (-58°F to 356°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
K (*1)	<b>Approvals</b>	
	A - ATEX / IECEx – up to Supplement 6	II 1/2G Ex ia IIC T2...T6 Ga/Gb
	L - ATEX / IECEx – Supplement 7 onwards	II 1/2G Ex ia IIC T2...T6 Ga/Gb
L	Certificates	Non-Ex relevant position
M	Supplementary equipment	Non-Ex relevant position
N	Design	Non-Ex relevant position

(\*1) = After implementation of ATEX supplement 7 (IEC issue 1), sensors of supplement 6 (IEC issue 0) with the code „A“ shall no longer be produced, and are therefore no longer available for delivery.

(\*2) = The Abbreviations AI and PE determine whether an aluminium (AI) or polyester (PE) terminal box is selected.

## 8.5 The TMR Sensor

TMR -	A	B	C	-	D	E	F	G	H	I	J	K	-	L	M	N	O	-	P	-	Q	-	R
-------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Pos.	Description	Remarks / EX-Relevance
A	Wetted Material	Non-Ex relevant position
B,C	Flow-Rate Range	Non-Ex relevant position
D,E,F,G	Process Connection	Non-Ex relevant position
H,I,J,K	Installation Length	Non-Ex relevant position
L	Enclosure Options	Non-Ex relevant position
M	Heating / Cooling	Non-Ex relevant position
N	Flow Direction	Non-Ex relevant position
O	<b>Sensor configurations</b>	
(*2) (*3)	1 - Mounted -50°C to 100°C (-58°C to 212°F)	Refer to Transmitter approval
	2 - Mounted -50°C to 150°C (-58°F to 302°F)	Refer to Transmitter approval
	3 - Remote -50°C to 100°C (-58°F to 212°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	4 - Remote -50°C to 180°C (-58°F to 356°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	5 - Remote -50°C to 220/260°C (-58°F to 500°F)	with M20 x 1.5 mm Cable gland <b>(AI)</b>
	6 - Remote -50°C to 100°C (-58°F to 212°F)	with ½" NPT Cable gland
	7 - Remote -50°C to 180°C (-58°F to 356°F)	with ½" NPT Cable gland
	8 - Remote -50°C to 220/260°C (-58°F to 500°F)	with ½" NPT Cable gland
	S- Remote -50°C to 100°C (-58°F to 212°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
	T - Remote -50°C to 180°C (-58°F to 356°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
	U - Remote -50°C to 220/260°C (-58°F to 500°F)	with M20 x 1.5 mm Cable gland <b>(PE)</b>
P (*1)	<b>Approvals</b>	
	A - ATEX / IECEx – up to Supplement 6	II 1/2G Ex ia IIC T2...T6 Ga/Gb
	L - ATEX / IECEx – Supplement 7 onwards	II 1/2G Ex ia IIC T2...T6 Ga/Gb
Q	Certificates	Non-Ex relevant position
R	Supplementary equipment	Non-Ex relevant position

(\*1) = After implementation of ATEX supplement 7 (IEC issue 1), sensors of supplement 6 (IEC issue 0) with the code „A“ shall no longer be produced, and are therefore no longer available for delivery.

(\*2) = The Abbreviations AI and PE determine whether an aluminium (AI) or polyester (PE) terminal box is selected.

(\*3) = The maximum process temperature of 260 °C is only permitted short-term. Refer to section **Fehler!**  
**Verweisquelle konnte nicht gefunden werden.** for more details

### 8.6 The TM-SH Sensor

TM-SH -	A	B	C	D	-	E	F	G	H	-	I	J	K	-	L	M	-	N	O	-	P	-	Q
---------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Pos.	Description	Remarks / EX-Relevance
A,B	Model / Range	Non-Ex relevant position
C,D	Wetted Material	Non-Ex relevant position
E,F,G,H	Process Connection	Non-Ex relevant position
I	Enclosure Options	Non-Ex relevant position
J	Enclosure Filling	Non-Ex relevant position
K	Heater / cooling	Non-Ex relevant position
L	<b>Sensor configurations</b>	
	K - Remote -50°C to 60°C (-58°F to 140°F)	Connection via M20 1,5 connector
	L - Remote -50°C to 100°C (-58°F to 212°F)	Connection via M20 1,5 connector
	X - Customer specified	Connection via M20 1,5 connector
M (*1)	<b>Approvals</b>	
	A - ATEX / IECEx – up to Supplement 6	II 1/2G Ex ia IIC T2...T6 Ga/Gb
	L - ATEX / IECEx – Supplement 7 onwards	II 1/2G Ex ia IIC T2...T6 Ga/Gb
N	Calibration Flow	Non-Ex relevant position
O	Calibration Density	Non-Ex relevant position
P	Supplementary Equipment	Non-Ex relevant position
Q	Design	Non-Ex relevant position

(\*1) = After implementation of ATEX supplement 7 (IEC issue 1), sensors of supplement 6 (IEC issue 0) with the code „A“ shall no longer be produced, and are therefore no longer available for delivery

## 9. EC Declaration of conformity

 <b>EU-Konformitätserklärung</b> <b>EU-Declaration of Conformity</b>		
<hr/> <b>Nº. 20-4142-01</b> <hr/>		
Hersteller: <i>Manufacturer:</i>	Heinrichs Messtechnik GmbH Robert-Perthel-Strasse 9 50739 Köln	
Produktbeschreibung: <i>Product description:</i>	<b>Coriolis Durchflussmessgerät UMC4 für Verwendung mit der Sensorreihen TM* und HPC</b> <b>Coriolis Flowmeter UMC4 for use with the Sensor series TM* and HPC</b>	
Hiermit erklären wir, in alleiniger Verantwortung, dass das oben genannte Messsystem den Anforderungen der folgenden EU-Richtlinien, einschließlich allen bis heute veröffentlichten Änderungen bzw. Nachträgen entspricht: <i>We declare herewith, in sole responsibility, that the product described above is conform with the provisions of the following EU-directives, including all published changes and amendments as of today:</i>		
<b>2014/30/EU (EMC)</b>	EU-Richtlinie über die Elektromagnetische Verträglichkeit <i>EU-Directive relating to electromagnetic compatibility</i>	
<b>2014/34/EU (ATEX)</b>	EU-Richtlinie über Geräte zur Bestimmungsgemäße Verwendung in explosionsgefährdeten Bereichen. <i>EU-Directive relating to electrical equipment intended for use in potentially explosive atmospheres</i>	
<b>2014/35/EU (LVD)</b>	EU-Richtlinie über die Bereitstellung elektrischer Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen auf dem Markt <i>EU-Directive relating to the making available on the market of electrical equipment designed for use within certain voltage limits</i>	
<b>2014/68/EU (PED)</b>	EU-Richtlinie zur Harmonisierung der Rechtsvorschriften der Mitgliedstaaten über die Bereitstellung von Druckgeräten auf dem Markt <i>EU-Directive on the harmonisation of the laws of the Member States relating to the making available on the market of pressure equipment</i>	
<hr/> Anhang N und X sind ein integraler Bestandteil dieser Erklärung <i>Annex N and X are an integral part of this declaration</i>		
Köln, den 01.04.2020		
 Joseph Burke (Explosionsschutzbeauftragter / Explosion Protection Representative)	 Michael Manderfeld (Druckgerätebeauftragter / PED Representative)	
 Guido Thometzki (Geschäftsführung / Managing Director)	<b>Kontakt:</b> <b>Contact:</b>	Tel: +49 (221) 49708-0 Email: <a href="mailto:info@heinrichs.eu">info@heinrichs.eu</a> Web: <a href="http://www.heinrichs.eu">www.heinrichs.eu</a>
Konformitätserklärung-UMC4_20-4142-01.docx		Seite 1 von 3


**Anhang N zur EU-Konformitätserklärung  
Annex N of the EU-Declaration of Conformity**
**Nº. 20-4142-01**

Produktbeschreibung: **Coriolis Durchflussmessgerät UMC4 für Verwendung mit der Sensorreihen TM\* und HPC**  
 Product description: **Coriolis Flowmeter UMC4 for use with the Sensor series TM\* and HPC**

Die Konformität mit den auf Seite 1 genannten Richtlinien diese Erklärung wird nachgewiesen durch die Einhaltung folgenden Normen (abhängig von Gerätvariant):  
 Conformity to the Directives referred to on Page 1 of this Declaration is assured through the application of the following standards (depending on version of device):

Richtlinie Direktive	Norm –Ref. Nr. Standard / Ref. Nº.	Ausgabe Edition	Norm Beschreibung Standard Description	UMC4	TM/ TMU/ TME/ TMR	TM-SH	HPC
	<b>DIN EN -</b>						
2014/30/EU	61000-6-2	2011-06	Immunity Industrial enviroment	X			
	61000-6-3	2012-11	Emission residential enviroment	X			
	55011	2011-04	Radio frequency disturbance	X			
	61326-1	2011-07	EMC requirements	X			
2014/34/EU	60079-0	2012+ A11:2013	General requirements	X	X	X	X
	60079-1	2014	Flameproof Enclose „d“	X			
	60079-11	2012	Intrinsic Safety „i“	X	X	X	X
	60079-26	2015	Protection Level (EPL) „Ga“	X	X	X	
2014/35/EU	61010	2011-07	Safety requirements	X	X	X	
2014/68/EU	AD 2000-Merkblätter		Module H		X	X	

X: Zutreffende Norm / Applicable Standard

Name und Anschrift der Notifizierte Stelle / Name and Address of the Notified Body

TÜV-SÜD Industrie Service GmbH  
 TÜV SÜD Gruppe  
 Westendstraße 199  
 D-80686 München  
 ID-Nr. / ID-Nº.: RL 2014/68/EU: 0036

DEKRA Testing and Certification GmbH  
 Carl-Beyling-Haus  
 Dinnendahlstraße 9  
 D-44809 Bochun  
 ID-Nr. / ID-Nº.: RL 2014/34/EU: 0158



**CE** Anhang X zur EU-Konformitätserklärung  
**Annex X of the EU-Declaration of Conformity**



Nº. 20-4142-01

Produktbeschreibung: **Coriolis Durchflussmessgerät UMC4 für Verwendung mit der Sensorreihen TM\* und HPC**  
*Product description:* **Coriolis Flowmeter UMC4 for use with the Sensor series TM\* and HPC**

Gerät Zulassungen / Device certification

EG-Baumusterprüfbescheinigung <i>EC-type examination certificate</i>	Nachtrag <i>Supplement</i>	Kennzeichnung <i>Marking</i>  <i>Für kompletten Kennzeichnung, siehe Betriebsanleitung</i>	UMC4	TM/TMU/ TME/TMR	TM-SH	HPC
BVS 10 ATEX E 110 X	1	II (1) 2G	X			
DMT 01 ATEX E 149 X	7	II 1/2G		X	X	
CML 19 ATEX 2096 X	0	II 1G II 1/2D				X

X: Zutreffende Norm / Applicable Standard

Die oben genannten Produkte entsprechen der Richtlinie 2014/34/EU. Neue Editionen können bereits eine oder mehrere der in den jeweiligen EG-Baumusterprüfbescheinigungen genannten Normen ersetzt haben. Der Hersteller erklärt, dass alle Produkte erwähnt in dieser Konformitätserklärung auch der Anforderungen der neuen Editionen einhalten, da die veränderten Anforderungen der neuen Editionen haben entweder keinen Einfluss auf das Produkt, oder das Produkt die Anforderungen erfüllt.

*The above-mentioned products comply with the requirements of Directive 2014/34/EU. New editions may have already replaced one or more of the Standards stated in the respective EC-Type-examination Certificates. The manufacturer declares that all products mentioned in this Declaration of Conformity also comply with the requirements of the new editions since the changed requirements of the new editions either do not affect the product, or the product also fulfills the requirements.*

**Heinrichs Messtechnik GmbH**

Robert-Perthel-Straße 9  
50739 Köln  
Telefon 0221/49708-0  
Telefax 0221/49708-178  
<http://www.heinrichs.eu>  
[info@heinrichs.eu](mailto:info@heinrichs.eu)

**Bankverbindung**

Dresdner Bank Köln  
BLZ 370 800 40  
Konto-Nr. 0955 051300  
IBAN :  
DE58 3708 0040 0955 0513 00  
SWIFT-BIC: DRES DE FF 370

**Erfüllungsort und Gerichtsstand:**

Köln  
Amtsgericht Köln HRA 37040  
Ust.IDNr.: DE813416533  
Steuer-Nr.: 217/5743/0386

**Geschäftsführer**

Dipl. Ing. (FH)  
Guido Thometzki